




1. Run NovalCT-Mars, move the cursor over the *Advanced User Login (A)* and click the button.

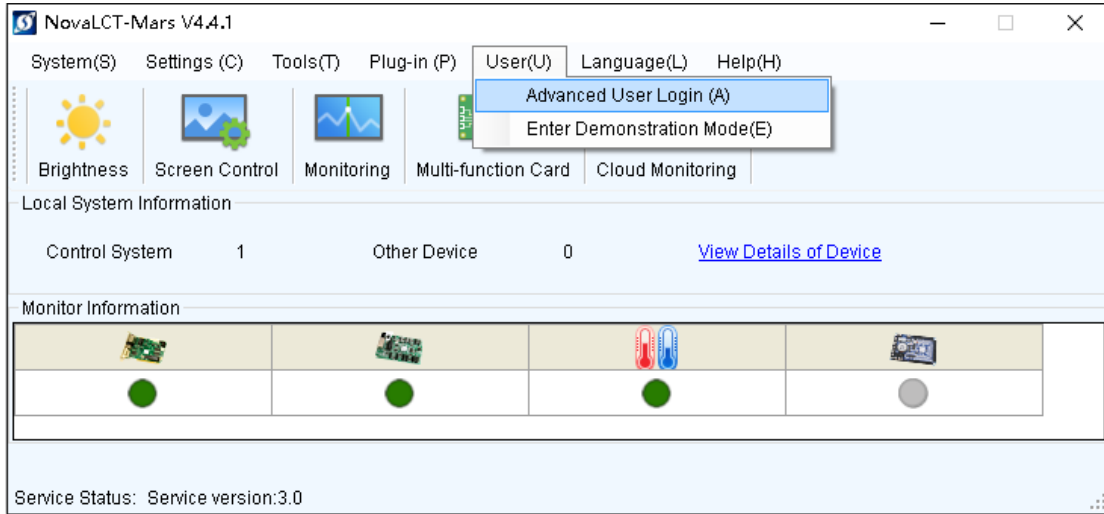

2. Login with the password "admin".

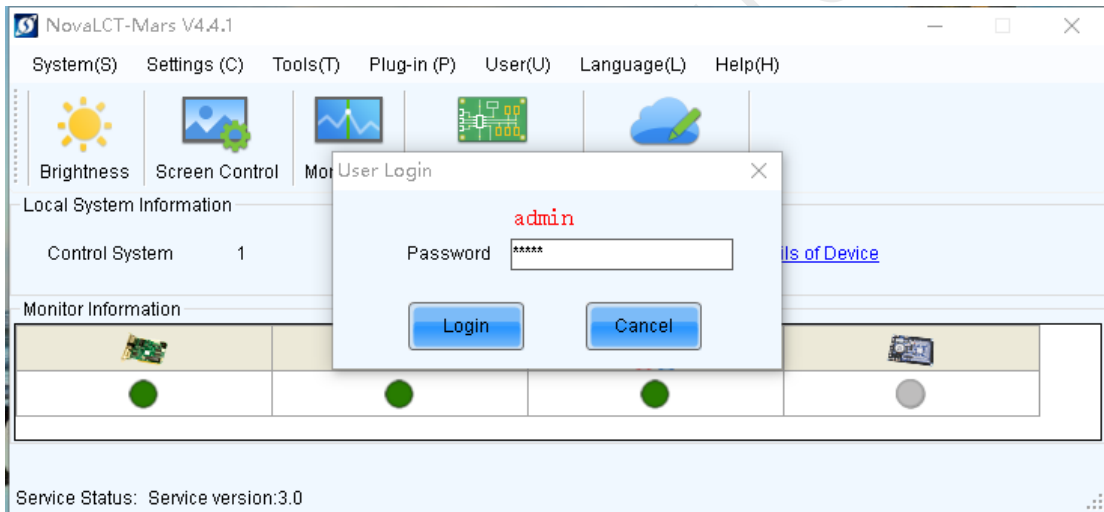

3. Type "admin" on the blank.

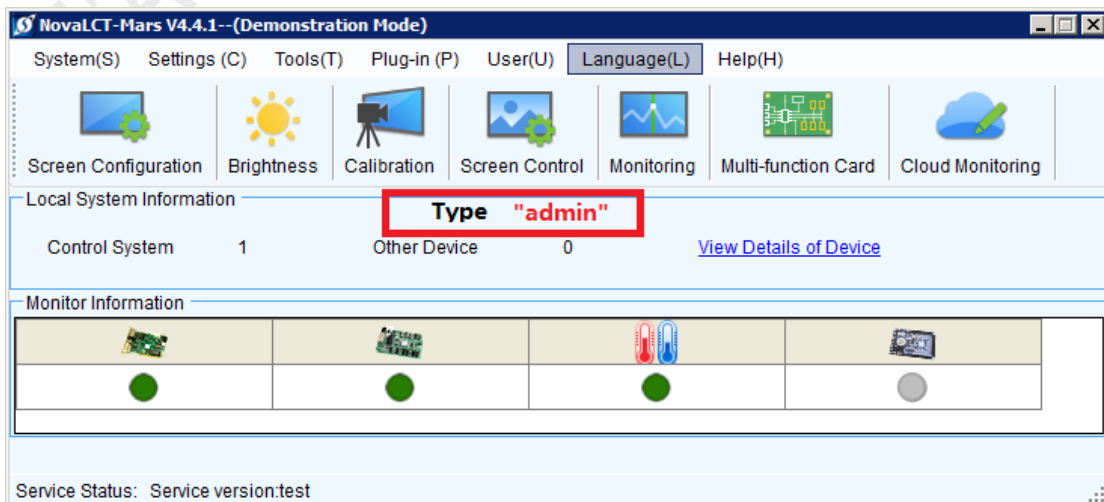

4. Choose right communication port → click *Sending Card FPGA* → click *Refresh* to finish firmware version check.

