




- Run NovaLCT-Mars, move the cursor over the *Advanced User Login (A)* and click the button.

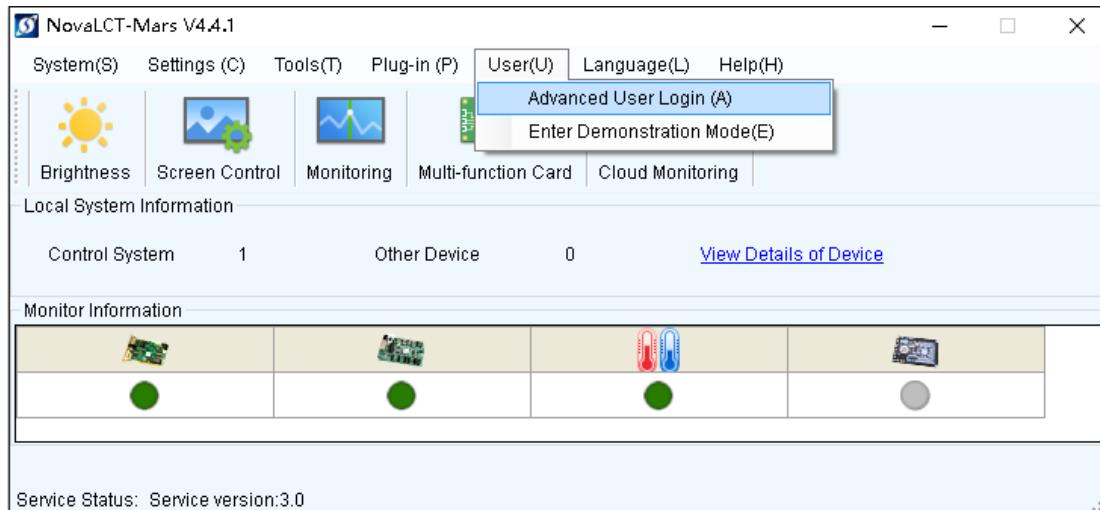


- Login with the password "admin".

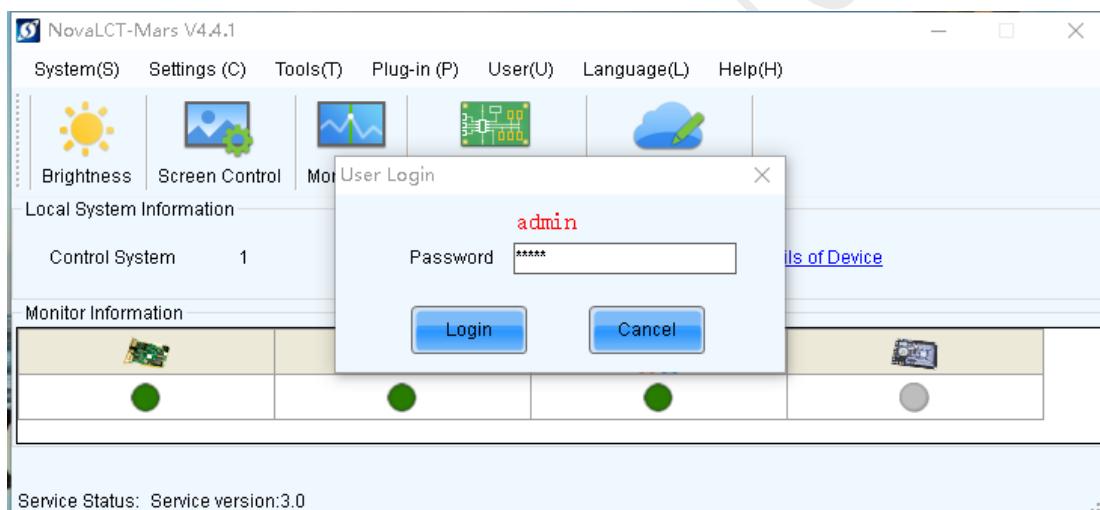

- Click on the *Monitoring* button.

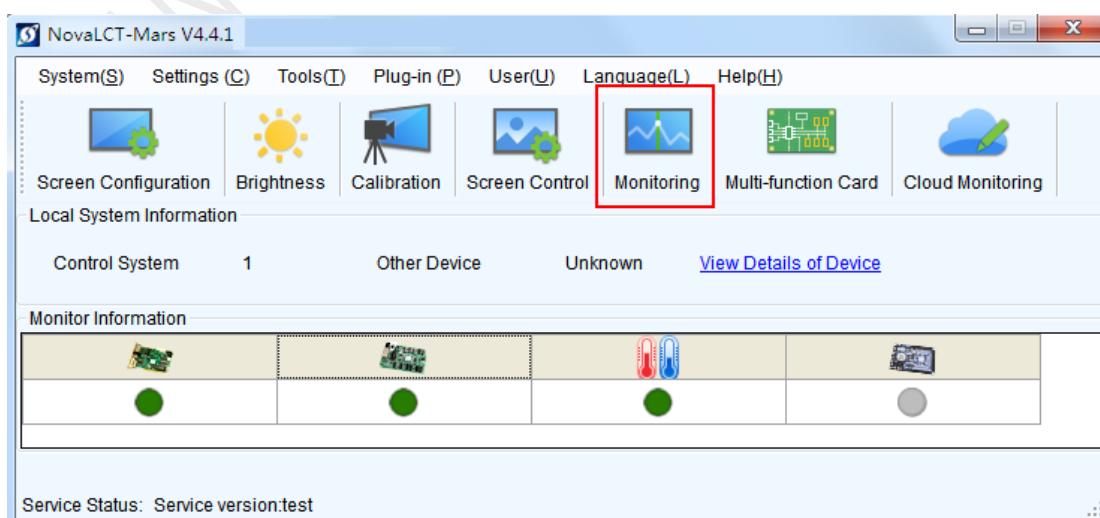

4. Click to select the *Configuration* button.

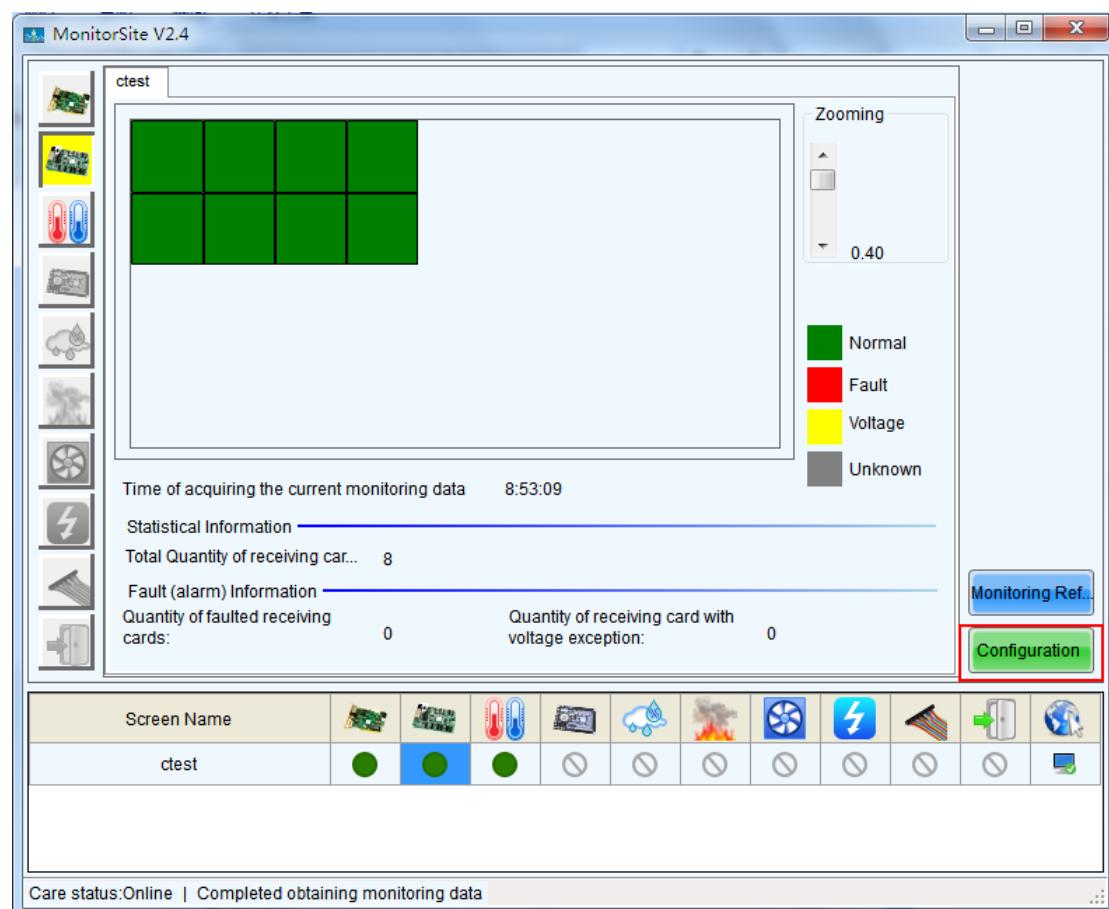

5. Choose the *Alarm*, and set alarm limitation you want for *temperature, humidity, fan speed, voltage*. At last, click *Save*.

**MonitorSite - Settings**

**Refresh Period** Select Screen to Configure

**Hardware Settings**

**Alarm**

**Monitoring Control**

**Email**

**Email Log**

When the temperature > 60 °C, show alarm information. [Fahrenheit degree](#)

When the humidity > 60 %, show alarm information.

When the rotation sp... < 1000 r/m, show alarm information.

When the voltage < 4.0 V, show alarm information.

When the voltage < 3.5 V, show fault information.

Note: Defaults of full-screen configuration come from the first configuration, and later modification on single screen does not affect the full-screen information.

**Save**