1. Run NovaLCT-Mars, move the cursor over the *Advanced User Login (A)* and click the button.

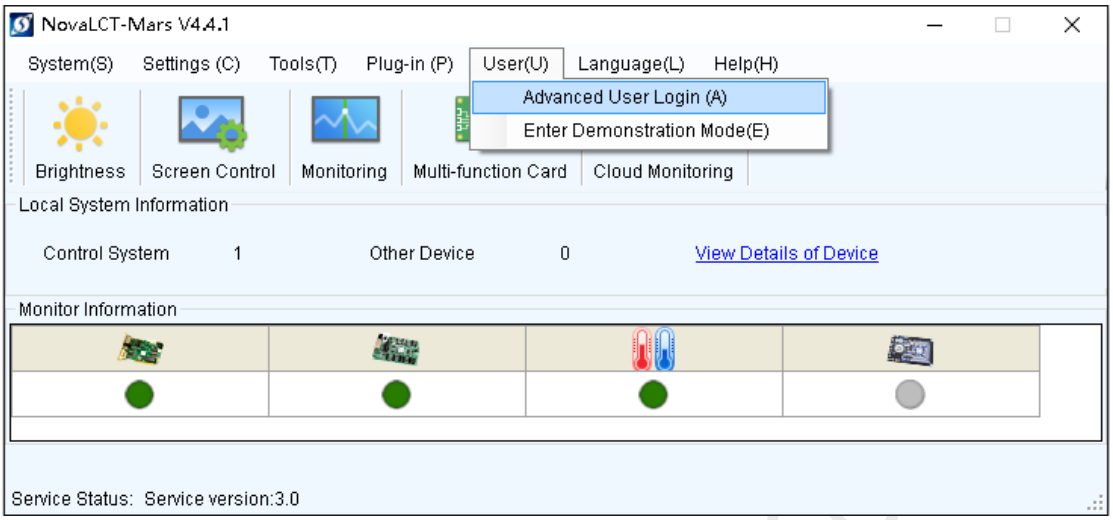

2. Login with the password "admin".

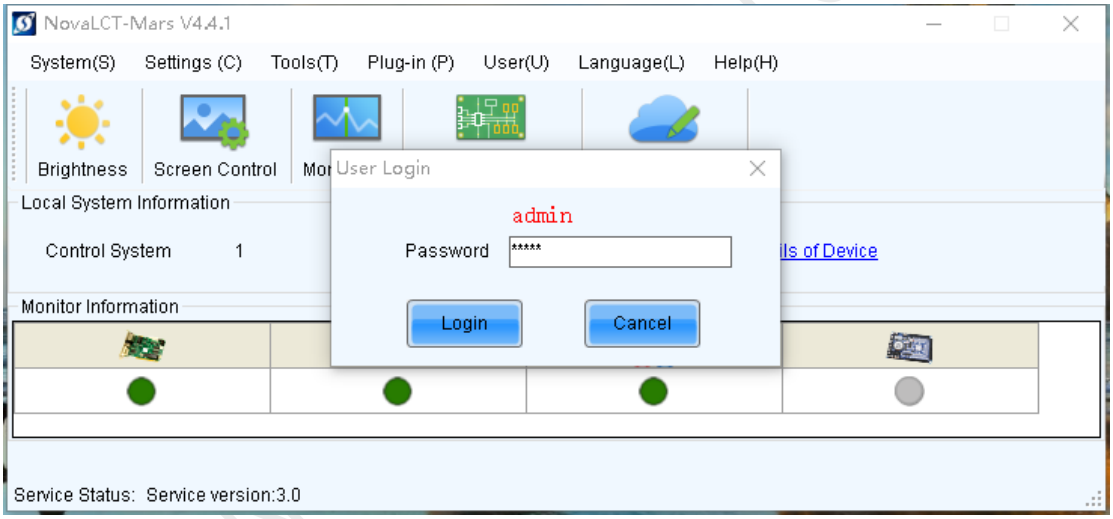

3. Click on the *Monitoring* button.

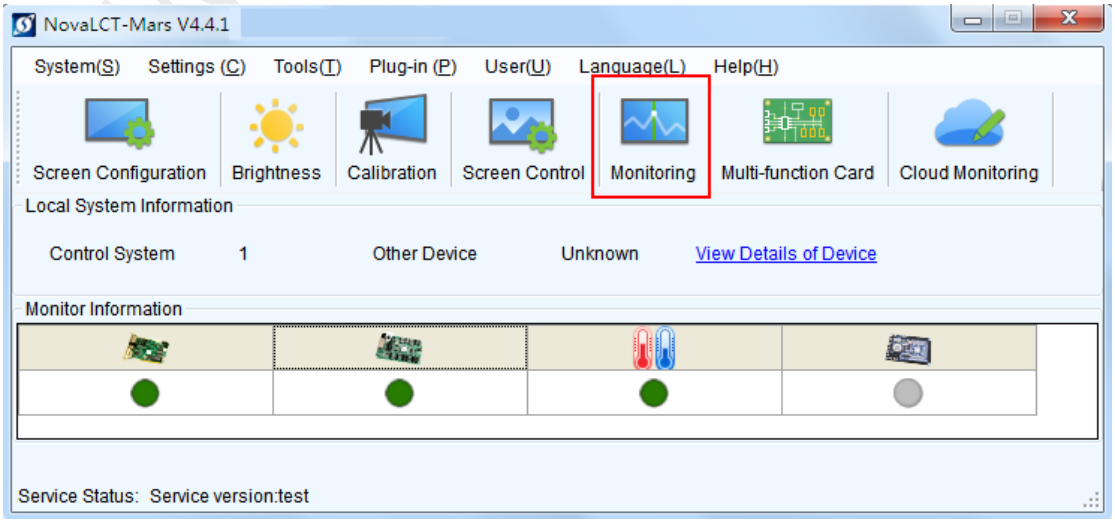

4. Click to select the *Configuration* button.

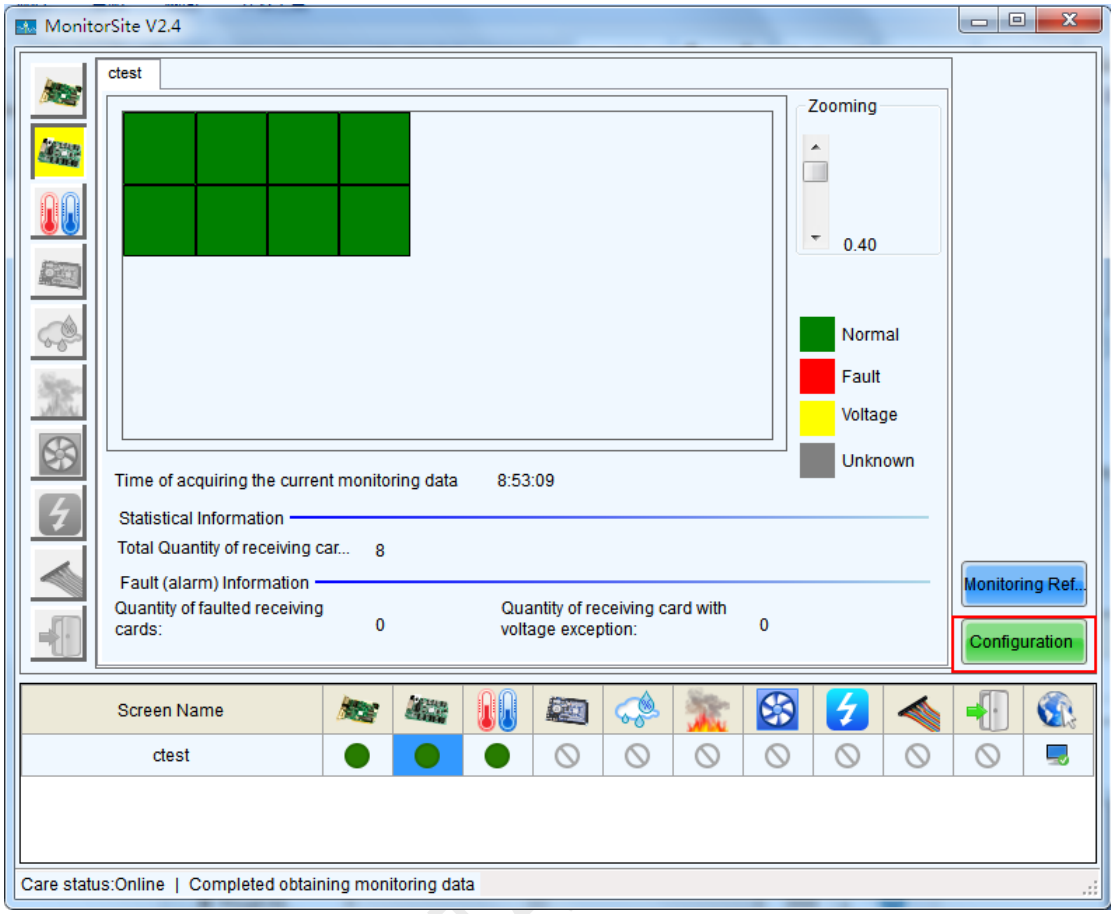

XI'AN NOVASTAR

5. Choose the *Hardware Settings*, and click the *Connect to Monitoring Card*. At last, click *Save*.

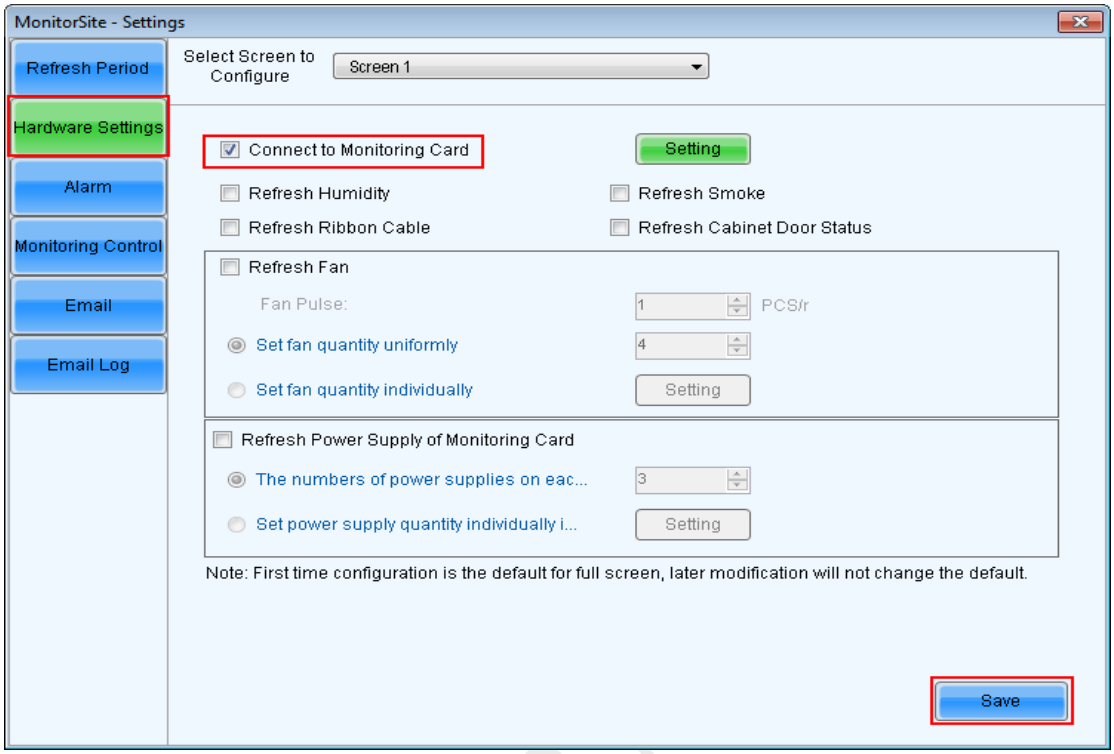

6. If the quantity of Monitoring Card is different in each cabinet, please go to the *Setting*, choose specific cabinet by *double clicking* in topology, then set actual Monitoring quantity of each cabinet.

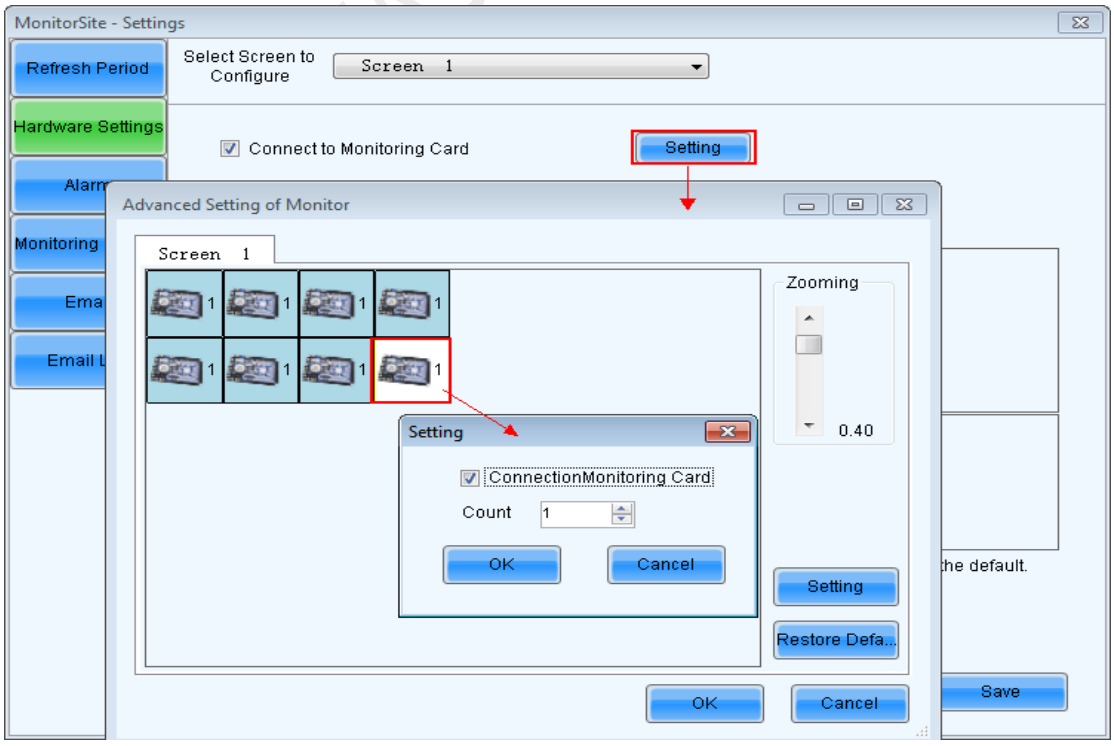

7. Then you can go back to the monitor interface, you can check the Monitoring Card status.

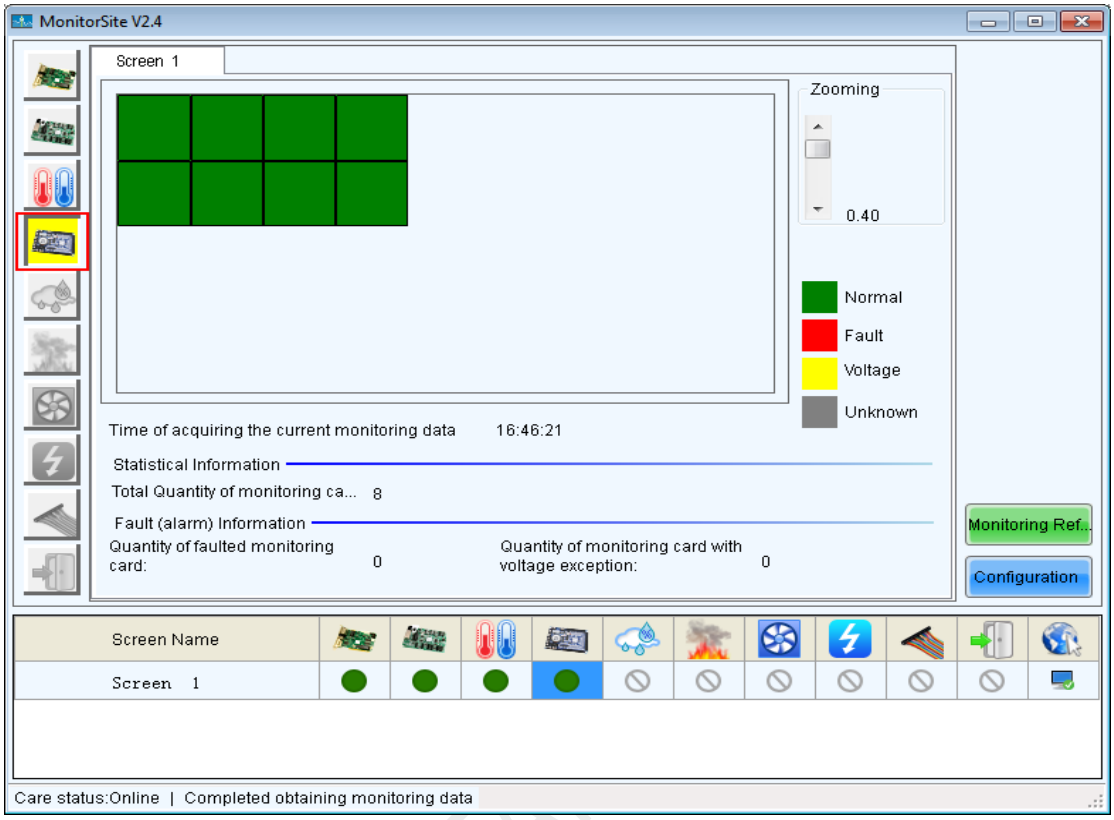

XI'AN NOVASTAR

8. Status illustration

Square Color	Meaning	Solution
Green	Working normallyly	
Red	Connection problem or monitor card broken	A. Check the power of the monitor card B. Check the connection of ribbon cable between monitor card and receiving card
Yellow	Low voltage alarm	Check the voltage of power supply
Gray	None detection	Click Refresh button to read

Note: The voltage threshold value can be set in Monitor setting

XI'AN NOVASTAR TECH CO., LTD